

# iSpeaker M-800 (without speaker)

## 2.4G Wireless Cascaded Omnidirectional Microphones Kit


Datasheet 21V1.0

### Master + Microphones kit

The iSpeaker M800 master is a conference audio controller based on 2.4G network communication. The master can be connected with an active speaker and 4 cascaded microphones by the 2.4G wireless. It also supports wireless handheld microphone local amplification, which is widely used in large conferences, it can also be used for leisure and entertainment venues.

### Installation

1. Connect the antenna to the master.
2. Connect a 6.5mm audio cable to an active speaker and master
3. Connect power supply
4. Connect USB B cable to the master and PC

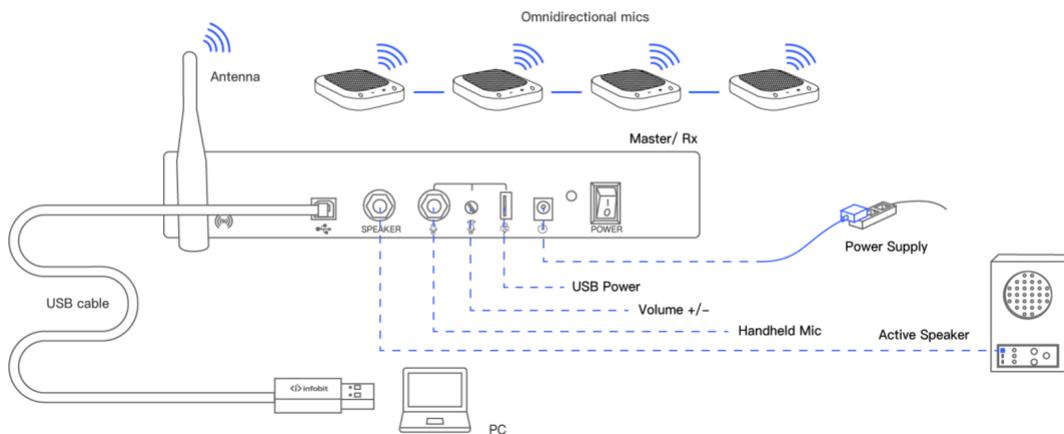

---

## **Datasheet**

### **Size**

Master: 267\*145\*51mm  
Microphone: 110\*110\*25mm

### **Weight:**

Master: 1044g  
Microphone: 236g/ each

### **Color:**

Black

### **Interface**

USB B interface  
6.5mm audio jack  
6.5mm handheld microphone interface  
Handheld microphone receiver charging port  
Hand-held microphone volume adjustment knob  
Antenna interface  
DC power interface

### **Wireless Microphone**

Audio bandwidth: 100-16KHz  
Sensitivity: -38 dB  
94dB SPL@1KHz  
SNR: 65dB  
94dB SPL@1KHz, A-weight

### **Power Supply**

Host power adapter  
-12V2A  
Slave power adapter  
-5V/500mA  
-Support wireless charging

### **Audio characteristics**

Digital audio processing  
384ms echo cancellation  
Intelligent dynamic noise reduction  
Full duplex  
360° pickup range  
The pickup radius is 5 meters (Each omnidirectional microphone)

### **Computer system required**

Windows 7 / Windows 10 /macOS

### **Button on mics**

Microphone mute  
Speaker mute  
Volume up  
Volume down  
Power switch

### **Environmental requirements**

Temperature: 5~44 °C  
Humidity: 20~85%  
(no condensation)  
Noise level: <48db  
Storage temperature:  
-10~55°C

### **Master LED light status**

Red light always on: under normal work

The speaker indicator in green:  
Under normal work

The speaker indicator in red:  
Speaker mute

### **Slave mics LED light status**

Normal work:  
Green light always on

Mute microphone:  
Red light always on

Low power:  
Red light of the speaker flashes

Volume adjustment:  
The mic green indicator flashes

Not connected:  
The green light flashes