

## Guide to connect iMatrix C604 and iShare X400

V1.0


### INTRODUCTION

It supports passthrough the USB devices like videobar camera, webcam, microphone or speakerphone to USB C, USB B Host 1 and 2 which can connect to iShare X400 directly to allow users to use wireless BYOM at will.

### CONNECTION

1- Connect HDMI OUT from iShare X400 to HDMI INPUT of iMatrix C604 and connect USB from iShare X400 to one of the USB B Host of iMatrix C604.


2- Connect USB videobar camera, webcam, microphone or speakerphone to USB A devices of iMatrix C604.

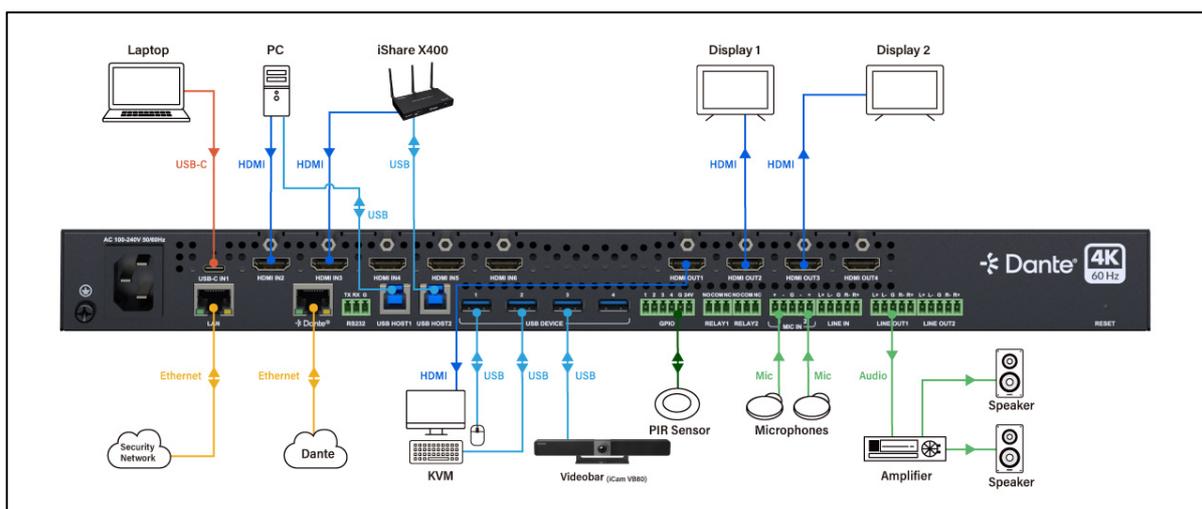

*Hardware connection*

### STEP 1: SETUP USB ROUTING


- 1- View IP address at the front panel LCD screen of iMatrix C604.
- 2- Login iMatrix C604 Web GUI, **default password: admin**
- 3- Select right USB routing.

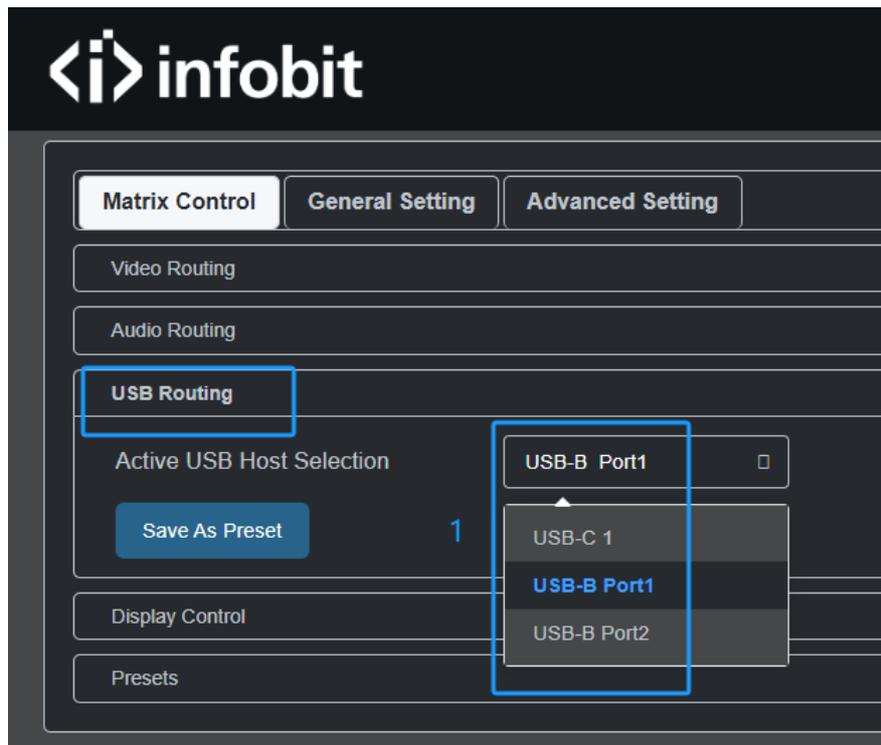

Step 1: setup USB routing

## STEP 2: SETUP USB AUDIO ROUTING


Setup the right audio routing. (It is not necessary if only use USB videobar, user can skip this step)

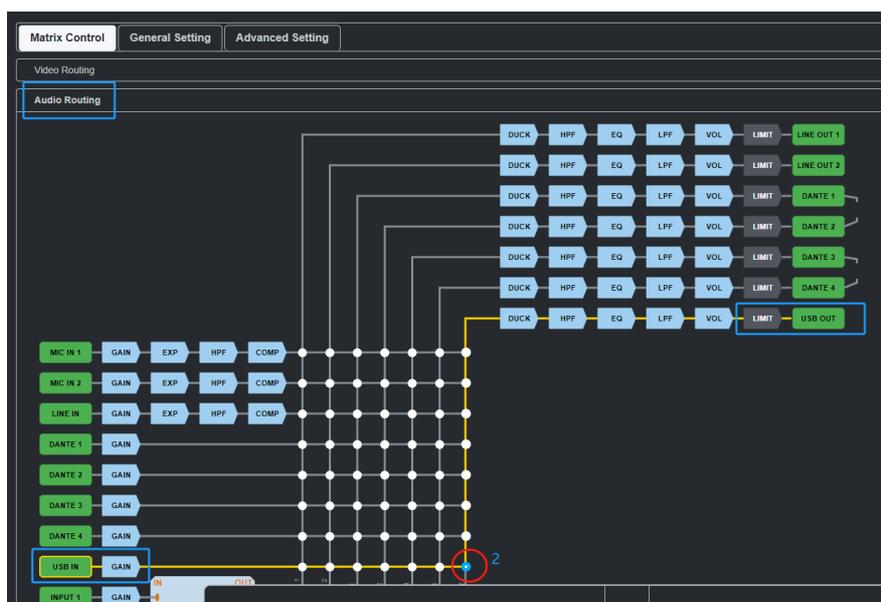

Step 2: setup USB audio routing

## STEP 3: SELECT USB AUDIO IN ISHARE X400

Login iShare X400 Web GUI, select the right USB Audio including speaker and microphone. User can test here to check if it works well.

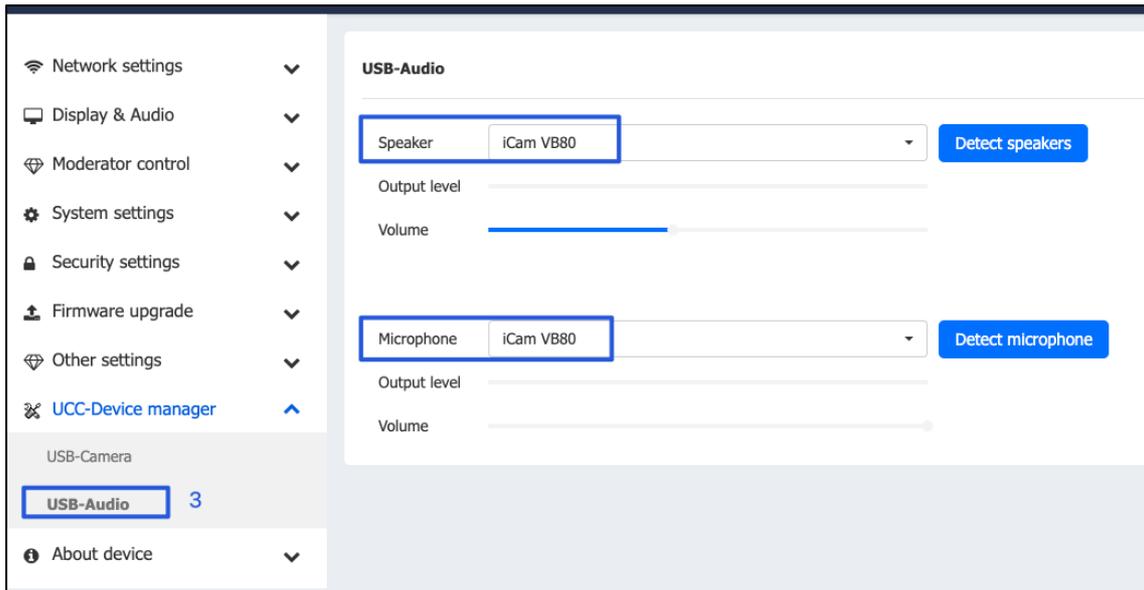

Step 3: select USB audio in the iShare X400

## STEP 4: SELECT USB AUDIO OUTPUT OF ISHARE X400

In iShare X400 Web GUI, select the right Audio Output as USB.

